


# HOME DECORATORS COLLECTION

HDC# 13147 MFG# TW-19070DW/TW-19070WO  
WHITMAN END TABLE 24"Hx22"Wx22"D

## ASSEMBLY INSTRUCTIONS

- Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.


Made In China

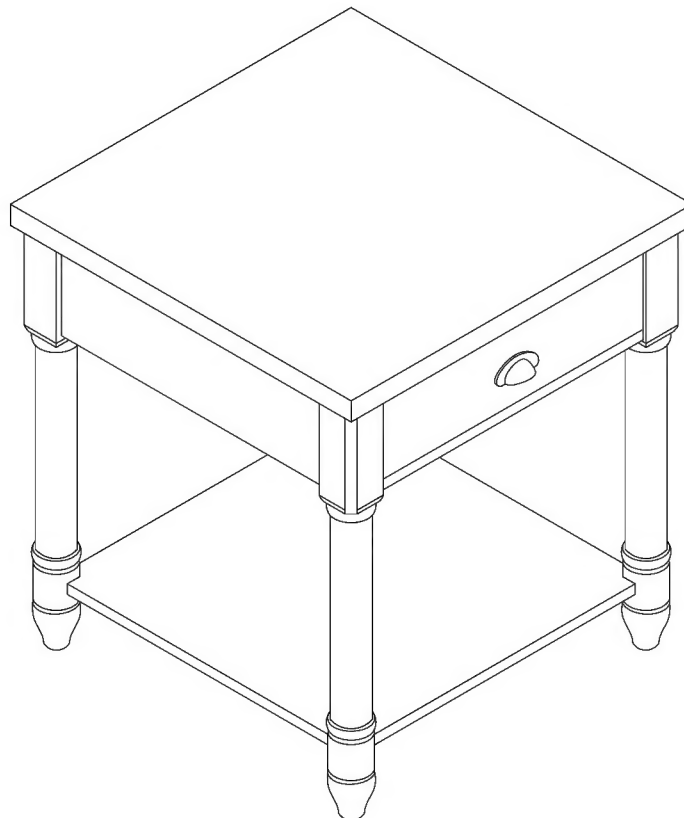

# BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

 
## ASSEMBLY TOOLS REQUIRED

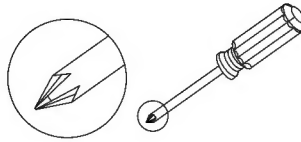



 

"+"Screw driver

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF PART NEEDED.

## HARDWARE LIST

<div>Knob Round Head Bolt Flat Washer 1 SET</div>  <div>(1)</div>		
--	--	--


## PARTS LIST
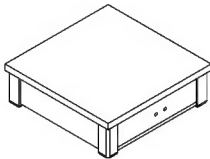
<div>TOP FRAME 1 PC</div>  <div>A</div>	<div>LEG 4 PCS</div>  <div>B</div>	<div>BOTTOM PANEL 1 PC</div>  <div>C</div>
<div>LEG 4 PCS</div>  <div>D</div>		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.


STEP 1: ASSEMBLE TOP FRAME (A) AND LEGS (B)

- ROTATE LEGS (B) ONTO TOP FRAME (A) TIGHTLY AS SHOWN.

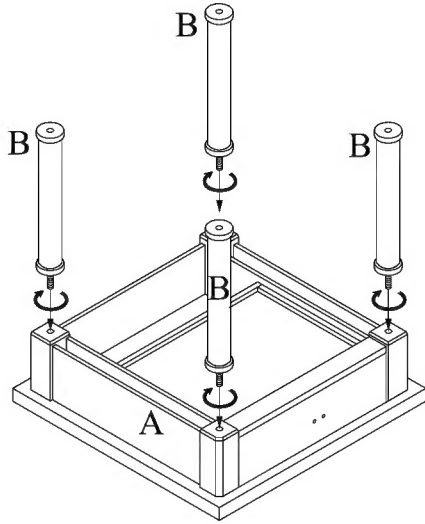

STEP 2: ASSEMBLE BOTTOM PANEL (C) AND LEGS (D)

- USE LEGS (D) TO ASSEMBLE BOTTOM PANEL (C) AND LEGS (B) TOGETHER AS SHOWN.

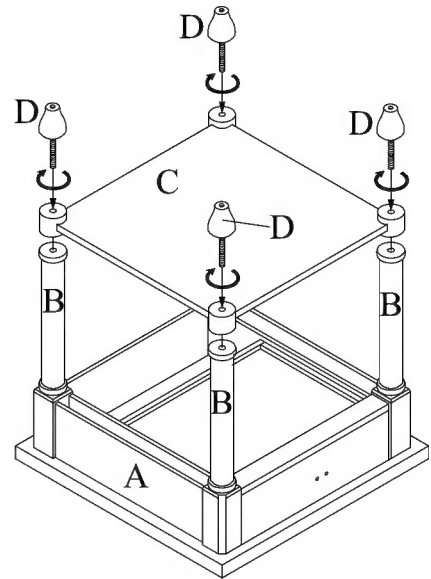

STEP 3: ASSEMBLE KNOB (1)

- USE ROUND HEAD BOLT AND FLAT WASHER (1) TO ASSEMBLE KNOB (1) ONTO DRAWER FRONT PANEL AS SHOWN.

